

AURIS



Classica User Manual

1. Introduction
2. Package contents
3. Safety instructions
4. Classica Turntable
5. Tonearm Auris W-10/W-10a
6. Specification
7. Warranty
8. Note

I.0 INTRODUCTION

Welcome to the Auris Audio Family.

If you have ever witnessed the majesty of a symphony orchestra, with its piano solos, majestic choirs, and thunderous timpani, understand the depth and intricacy of music, then the Auris Classica, with a W-10/W-10a Tonearm, is designed to provide everything you need to fully immerse yourself in the amazing world of music. Experience the complexity and virtuosity as the composers intended, and allow the Auris Classica to transport you to a world of musical mastery and timeless elegance.

Please take a short time to read the information in this manual.

www.aurisaudio.rs

2.0 PACKAGE CONTENT

- Turntable Classica
- Tonearm Auris W-10/W-10a
- Power Supply

Retain the packing materials for future use. Retain the user manual and information concerning the date and place of purchase of your equipment for further reference.

3.0 SAFETY INSTRUCTIONS

- Please read these instructions carefully before commencing installation. They provide full guidance to help you install your streamer safely and correctly.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Clean only with dry cloth. Unplug this product from the mains before cleaning.
- Do not install near any heat sources such as radiators, heat registers, stoves or any other apparatus that produce heat.
- Do not use this product near water.
- Do not defeat the safety purpose of the polarized or grounding-type plug. USA and Canada only: A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

- To completely disconnect this equipment from the mains, disconnect the power supply cord plug from the receptacle
- The mains plug of the power supply cord shall remain readily operable.
- ATTENTION:



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Unauthorized personnel must not open this unit.

- The unit must be mounted on a solid, level and stable surface.
- Before you connect the device to AC mains power, ensure your AC mains voltage corresponds to the product.

4.0 CLASSICA TURNTABLE




- 1. Main Platter
- 2. Tonearm Auris W-10/W-10a
- 3. Turntable Plinth



- 1. Tonearm Auris W-10/W-10-a
- 2. RCA Tone Arm Connector with grounding
- 3. Power supply socket
- 4. External PSU Connector
- 5. Turntable Plinth
- 6. Main Platter

5.0 TONEARM AURIS W-10/W-10a

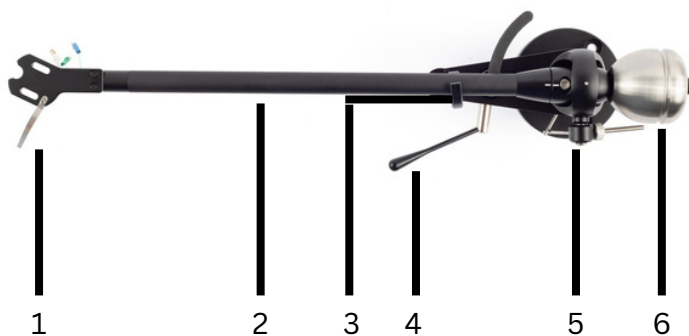


- 1. Headshell with finger lift
- 2. Carbon tonearm tube
- 3. Tonearm rest and removable transport lock
- 4. Tonearm Lift
- 5. Anti-scating
- 6. Balance weight



- 1. VTA Adjustment

5.1 W-10a AZIMUTH ADJUSTMENT

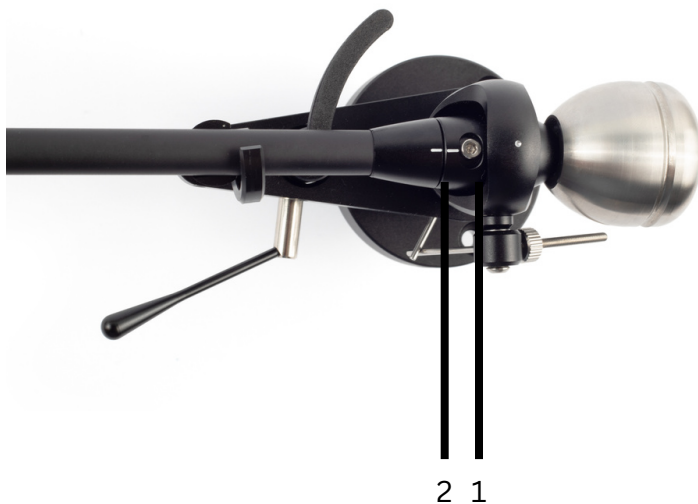

1. Loosen the screw a little
2. Adjust the azimuth by turning the tonearm wand $\pm 3^\circ$

6.0 SPECIFICATION

- Speed - 33,3 rpm/45rpm with included EON PSU
- Drive principle - Belt drive
- Platter - 299mm/11.77" Aluminum
- Main Bearing - Ceramic ball, Bronze cylinder
- Speed Variance - 33,3 +/- 0,11% 45 +/- 0,11%
- Tonearm - W-10a
- Tonearm effective arm mass - 12 gr / 0.026 lbs
- Overhang - 18mm / 0.70"
- Tracking Force - 5-40mN
- Tilt Angle - 24 °
- Cartridge Compliance - 6-14 gr / 0.013-0.030 lbs
- Dimensions - 445 x 360 x 140mm / 17.52" x 14.17" x 5.51"
- Weight - 7.9 kg / 17.41 lbs

7.0 WARRANTY

Product you have purchased is designed to give you enjoyment in your favorite music. However it is possible that the failure occurs even at this precise-made, high quality equipment. In this case, please read the enclosed warranty carefully which contains rights, limitations, exclusions and obligation.

Auris Audio warranty terms and condition

- Please register your product within 30 days of purchase, otherwise the warranty will not apply.
- Auris Audio products come with a two years limited warranty against defects in materials and workmanship.
- Guarantee service is available only in the region/country of original sale
- The guarantees start from the invoice-issue date
- Original invoice must be produced for the authentication prior to any warranty claim.
- Warranty is provided to the original owner only and is not transferable to any third party.
- The warranty does not cover:
 1. if the Auris Audio product is stored in a humid environment
 2. which has not been maintained in accordance with any operating or handling instructions provided by Auris Audio
 3. which has been used other than in accordance with the product operating and handling instructions
 4. any service or modification performed by an unauthorized person or company
 5. any product not purchased from Auris Audio or an a Auris Audio Authorized Partner
 6. repair work performed by the end user or any non-authorized repair center.
 7. normal wear tear and cosmetic damage
 8. product sold "as is", "as seen"
 9. connected equipment
 10. personal injury

- The limited warranty applies to the battery and is valid for 6 months (if any)
- Auris Audio will during the warranty period repair the product to working order or if this is not possible, Auris Audio will be replaced the product with the same one or the similar available product.
- Any parts/device that are replaced will become the property of Auris Audio
- After the warranty period, all the repairs and shipping cost will be charged to the owner.
- Any repair or replacement under this warranty will not extend the prior of warranty.

8.0 NOTE

If you have any question, contact us at: sales@aurisaudio.rs

For more visit aurisaudio.rs



This product should not be disposed with your household waste.

This product should be handed over to a designated collection point to be recycled.