


# Oppo BDP-93/95


Operation Manual

## Supports:

- Blu-ray zones: A, B, C
- DVD regions: 1, 2, 3, 4, 5, 6

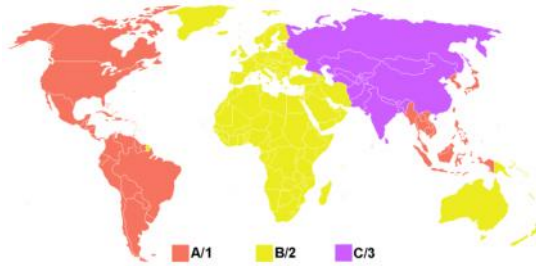

Blu-ray zones

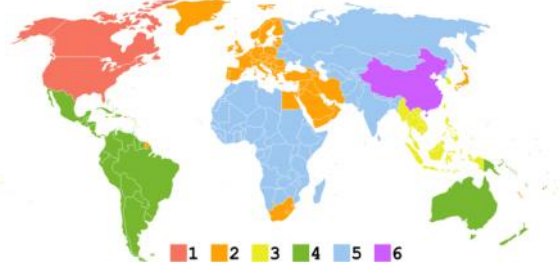

DVD regions

## OPERATING INSTRUCTIONS

### Switching Blu-ray Zones:

Switching Zones is done using the remote control.

- Make sure the player is on and there is no disc in the player.
- Turn the player off with the remote control, using the power button.
- Press **DIMMER – DIMMER – DIMMER - MUTE**
- Select Blu-ray zone as followed:
  - Zone A: Press **1** on the remote control
  - Zone B: Press **2** on the remote control
  - Zone C: Press **3** on the remote control
- Restart the player (turn it off and then back on)



### Switching DVD Regions:

Switching Regions is done using the remote control.

- Make sure the player is on and there is no disc in the player.
- Turn the player off with the remote control, using the power button.
- Press **DIMMER – DIMMER – DIMMER – PURE AUDIO**
- Select DVD Region as followed:
  - Region 1: Press **1** on the remote control
  - Region 2: Press **2** on the remote control
  - Region 3: Press **3** on the remote control
  - Region 4: Press **4** on the remote control
  - Region 5: Press **5** on the remote control
  - Region 6: Press **6** on the remote control
  - *Automatic*: Press **0** on the remote control
- Restart the player (turn it off and then back on)

NOTE: Zone/Region switching must be done within 20 seconds.

### Resume Playback Error:

Resume playback of a disc can generate a zone or region error message if the disc was first loaded in a none corresponding zone or region. Since the player 'remembers' where it stopped playing the last time, it will automatically resume playing from that point. Which will be the zone mismatch error part on the disc.

### Solution:

First make sure the correct zone or region is selected.  
Press the STOP button when the resume playback message shows on screen. This has to be done within 5 seconds (before the message goes off screen) .

# Oppo BDP-93 Basic mod

## Installation Manual


This modification is done entirely at your own risk. We do NOT accept any liability in the event of damage to your BD-player in the process of installation or in the usage of the modification.

**We recommend you read this manual completely before installing this modification.**

### Before installing:

#### 1: Make sure to set the player and players remote control to Code 1.

To select a new remote code, open the battery compartment cover of the remote control, and then use a ball point pen to flip the switch to the left position marked as "1". Close the battery compartment cover. Make sure that the player is turned on and the disc tray is ejected. Aim the remote control at the player. Press and hold the ENTER button for 5 seconds. The player will start using the new remote code.

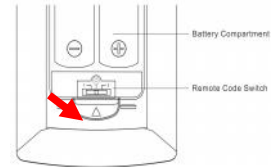

#### 2: Make sure the player is upgraded to a firmw are version later then March 18th 2011.

Goto [www.oppodigital.com](http://www.oppodigital.com) For US players and <http://www.oppo-bluray.co.uk> for European players to download the latest firmware . Or connect the player to your internet connection to have it installed automatically.

### Opening your player

Make sure that your player is **disconnected from the mains** before you even start opening the player. If you set the unit in front of you with the display towards you there are 5 screws at the back of the player. Remove them using a Philips screwdriver. Remove the 2 screws at the left and 2 at the right side. Remove the top cover, by gently lifting the back of the cover up, until it comes free.



The Yellow marked point shows where cable have to be inserted



Connect the 4-pin plug to the 4-pin socket on the right lower part of the mainboard. Remove the protective paper from the adhesive tape on the backside of the mod and place the to the side of the player.